



IMPORTANT: To register your Shark® Cordless Hand Vacuum, visit our website www.sharkclean.com.

IMPORTANT SAFETY INSTRUCTIONS


READ ALL INSTRUCTIONS BEFORE USING YOUR CORDLESS HAND VACUUM

When using your hand vacuum, basic safety precautions should always be followed, including the following:

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- DO NOT** use, charge or store the hand vacuum outdoors or on wet surfaces. Store the cordless vacuum indoors. Put vacuum away after use to prevent accidents.
- Use only as described in this manual.
- DO NOT** allow to be used as a toy. Close attention is necessary when used by or near children. **DO NOT** leave vacuum unattended while in use.
- DO NOT** handle plug, charger or appliance with wet hands.
- Fully assemble hand vacuum before operating. **DO NOT** use hand vacuum cleaner without dust cup filter in place. Use only on dry, indoor surfaces.
- DO NOT** use charger with an extension cord. Plug charger directly into an electrical outlet. Use charger only in a standard electrical outlet.
- DO NOT** attempt to use the charger with any other product nor attempt to charge this product with another charger. **Use only the charger model ZD6W210024US supplied with this appliance.**
- DO NOT** use charger with damaged cord or plug. If charger or hand vacuum has been dropped, damaged, left outdoors, or dropped in water, return it to SharkNinja Operating LLC for examination, repair or adjustment.
- DO NOT** abuse the charger cord, pull cord around sharp edges or corners or close door on cord. **Never** carry the charger by the cord or yank to disconnect from an outlet; instead grasp the plug and pull to disconnect. Keep charger cord away from heated surfaces.
- Use only manufacturer's recommended attachments. Always turn off this appliance before connecting or disconnecting the motorized nozzle. **DO NOT** attempt to change accessories while unit is running.
- Use extra care when cleaning on stairs.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- DO NOT** put any objects into openings. **DO NOT** use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- DO NOT** use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present. **DO NOT** pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- This product includes rechargeable Nickel Metal Hydride batteries. Batteries must be recycled or disposed of properly and safely. The battery must be removed from the appliance before it is discarded. The appliance must be disconnected from the supply when removing the battery. **Do not incinerate batteries or expose to high temperatures**, as they may explode.
- DO NOT** charge the battery at temperature below 32°F (0°C). This will degrade the battery performance, shorten life and cause gas leakage from venting. Optimum charging efficiency for the battery is within temperature range of 50°F (10°C) and 86°F (30°C).
- DO NOT** charge with the battery polarity reversed. This will cause battery venting, swelling or rupture.
- Leaks from battery cells can occur under extreme conditions. Improper use of the battery can cause the safety vent to activate. Small amounts of liquid (alkaline electrolyte) will leak from the vent near the terminal. If the liquid gets on the skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.
- DO NOT** use for any purpose other than described in this user's guide. Look on your hand vacuum and follow all label and marking instructions.
- This vacuum is intended for household use only.
- DO NOT** charge the unit outdoors.

SAVE THESE INSTRUCTIONS

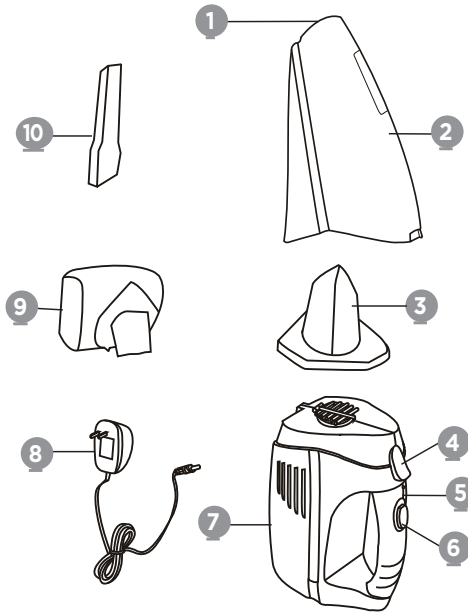

FEATURES

- | | |
|----------------------------|--------------------|
| 1 Air-Intake Nozzle | 6 Power Switch |
| 2 Dust Cup Container | 7 Motor Housing |
| 3 Dust Cup Filter | 8 Charging Adapter |
| 4 Dust Cup Release Button | 9 Motorized Brush |
| 5 Charging Indicator Light | 10 Crevice Tool |

TECHNICAL SPECIFICATIONS: 15.6 Volt MAX** Ni-MH Battery dc

ONE YEAR LIMITED WARRANTY

SharkNinja Operating LLC warrants this product to be free from material defects and workmanship for a period of one (1) year from the date of purchase when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

The liability of SharkNinja Operating LLC is limited solely to the cost of the repair or replacement of the unit at our option. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This limited warranty does not cover damage caused by misuse, abuse, negligent handling or damage due to faulty packaging or mishandling in transit. This warranty does not cover damage or defects caused by or resulting from damages from shipping or repairs, service or alteration to the product or any of its parts, which have been performed by a repair person not authorized by SharkNinja Operating LLC.

Non-durable parts, including, without limitation, filters, brushes and electrical parts which normally require replacement are specifically excluded from this warranty.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, you may return the complete appliance and accessories with proof of purchase and date, freight prepaid. For customer service support, call **1-800-798-7398** or visit our web site at sharkclean.com.

If the appliance is found by SharkNinja Operating LLC to be defective, in SharkNinja Operating LLC's sole discretion, we will repair or replace it free of charge. Proof of purchase date and check made payable to SharkNinja Operating LLC in the amount of \$11.95 to cover the cost of return shipping and handling must be included.

This warranty is extended to the original purchaser of the unit and excludes all other legal, implied and/or conventional warranties. The responsibility of SharkNinja Operating LLC if any, is limited to the specific obligations expressly assumed by it under the terms of this Limited Warranty. In no event is SharkNinja Operating LLC liable for incidental or consequential damages to anyone of any nature whatsoever. Some states do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

***IMPORTANT:** Carefully pack item to avoid damage in shipping. Be sure to include proof of purchase date and to attach a tag to item before packing including your name, complete address and phone number with a note giving purchase information, model number and what you believe is the problem with the item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE". We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

**Maximum initial battery voltage

CHARGING YOUR HAND VACUUM

- Before first using the hand vacuum, make sure that the On/Off switch is in the "Off" position and charge until indicator light turns OFF, max. 6 hours.
- Connect the charging jack to the charging hole that is on the back of the vacuum.
- Plug the charger into the wall outlet. The charging indicator light will illuminate to show that the vacuum is being charged.
- After first use, discharge the unit fully and then recharge until indicator light turns OFF, max. 6 hours.

MAXIMIZING THE LIFE OF YOUR NI-MH BATTERY

- Do not store in areas of high temperature or humidity.
- Use only the charger supplied with the product. If other chargers are used, the batteries can fail causing damage to the battery, product or personal property.
- After 3 months of non-use, the product should be fully discharged and then recharged to maximize battery power.
- If the product has never been used or has been stored for an extended period of time without use - it will take several complete charge and discharge cycles to realize the full operational time of your product.
- Ni-MH batteries have a long useful life but at some time they will need to be replaced. To purchase replacement batteries, visit sharkclean.com.

ASSEMBLY OF THE HAND VACUUM

IMPORTANT: The dust cup filter must always be used when operating the hand vacuum.

- Push the dust cup release button and remove the dust cup.
- Verify that the dust cup filter is inside, then reattach the dust cup to the hand vacuum.
- The motorized brush can be used to vacuum short pile carpets or rugs. To attach the motorized brush, make sure the On/Off switch is in the Off position. Then firmly insert the motorized brush into the air-intake nozzle, ensuring that the contact pins are engaged in the connector slots of the unit.
- The crevice tool can be used to clean narrow, hard to reach places. To attach the crevice tool, push the attachment into the air-intake nozzle.

WARNING: Do not touch the motorized brush while it is in motion.

- The crevice tool can be used to clean narrow, hard to reach places. To attach the crevice tool, push the attachment into the air-intake nozzle.

USING THE CORDLESS VACUUM

CAUTION: The air-intake nozzle and attachments must be free of obstructions at all times, otherwise the motor will overheat and could become damaged.

- To start the vacuum, push the "On/Off" switch to the "On" position.
- To turn the vacuum "Off", push the "On/Off" switch to the "Off" position.

CHANGING & CLEANING THE DUST CUP FILTER

NOTE: It is recommended that the dust cup filter be replaced every three (3) months to ensure peak performance of the vacuum.

- Press the dust cup release button and pull out the dust cup.
- Carefully remove the dust cup filter and empty the debris from the dust cup.
- Rinse the dust cup filter in water and let it dry completely before replacing back into the dust cup. Do not wash it in a washing machine or use a hair dryer to dry it. Air dry only!

BATTERY PACK REPLACEMENT & DISPOSAL

The cordless hand vacuum is powered by Ni-MH batteries, which must be recycled or disposed of properly in accordance with state, federal and local laws. If uncertain as to how to remove the battery pack, we suggest that you take your hand vacuum to a reputable small appliance service technician to have this service performed. Do not attempt to replace the batteries used in this product with any other type of battery. Follow these steps when replacement of the battery pack is required:

- Using a #1 Phillips head screwdriver, remove the single screw securing the battery compartment cover located underneath the unit.
- To remove the cover, lift up the battery compartment cover. Never open the battery compartment except to replace the battery pack. Set the cover and the screw aside.
- Slide the battery bar over and lift it out.
- Carefully lift out the top battery pack (A) by pulling the strap and disconnect the terminals. Then remove the single battery (B) that is on the bottom and disconnect the terminal.

- Connect the terminals to the new single battery (B) first and insert into the battery compartment. Then connect the terminals to the battery pack (A) taking care to connect the black lead (-) to the negative connector first and the red lead (+) to the positive connector second and insert into the battery compartment. Take care to tuck the wiring completely in so that the wiring does not interfere with the battery compartment cover when it is replaced.
- Replace the battery bar, the battery compartment cover and the screw making sure not to over-tighten the screw.

WARNING: Never use ordinary batteries for replacement as these may leak and damage your vacuum cleaner. Use only the battery pack XB75N provided by SharkNinja Operating LLC for replacement. Call customer service at 1 (800) 798-7398 or visit our web site at sharkclean.com to order replacement battery packs.

CAUTION:

- Use only with battery pack supplied.
- Do not attempt to remove the battery pack from the unit to charge.
- Never throw the battery pack or the appliance into a fire or incinerate it.
- Do not remove or damage the battery casing.
- Do not place the batteries on metal surfaces.
- Do not touch metal parts of the batteries together as the batteries will overheat.



TROUBLE SHOOTING

The hand vacuum will not operate	Batteries need to be recharged. Batteries need to be replaced. There is no power in the electrical outlet being used while charging. Try to charge using a different electrical outlet.
Motorized brush will not work	The metal contact pins on the motorized brush are not in contact with the connector slots on the vacuum. Remove the motorized brush and re-insert firmly into the air-intake nozzle. The motorized brush is blocked. Carefully remove all the lint, hair, etc. from the motorized brush.
Hand vacuum will not pick up or suction is weak	Dust cup is full. Empty the dust cup. Dust cup filter needs cleaning or replacement. Clean or replace the dust cup filter. Vacuum needs to be recharged.
Dust is escaping from the hand vacuum	Empty the dust cup container. The dust cup filter is not installed correctly. Remove it and re-insert it. The dust cup filter has a hole or a puncture in it. Replace it with a new one.

PARTS

To order additional parts for your Shark® CORDLESS HAND VACUUM models SV75C_N , SV75ZC_N, go to sharkaccessories.com or call 1-800-798-7398.

PART	PART NO
Dust Cup Filter	XSB726N
Battery Pack	XB75N
Charging Stand (optional)	1048FI
Charging Adaptor	XA75N

SharkNinja Operating LLC
Newton, MA USA 02459
Ville St. Laurent, Québec Canada H4S 1A7
1-800-798-7398
sharkclean.com
Copyright© 2017 SharkNinja OPERATING LLC
For SharkNinja U.S. Patent information, visit sharkninja.com/USPatents.
Shark is a registered trademark of SharkNinja Operating LLC.
Printed in China .
Illustrations may differ from actual product.

Shark
CORDLESS

SV75C_N
SV75ZC_N



IMPORTANT: pour enregistrer votre aspirateur portatif sans fil SHARK^{MD}, visitez notre site Web sharkclean.com.

MESURES DE SÉCURITÉ IMPORTANTES


LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER VOTRE ASPIRATEUR PORTATIF SANS FIL

Des précautions de sécurité de base doivent toujours être respectées lorsque vous utilisez votre aspirateur portatif, incluant les mesures suivantes :

AVERTISSEMENT : POUR RÉDUIRE LE RISQUE D'INCENDIE, DE CHOCS ÉLECTRIQUES OU DE BLESSURES.

- N'UTILISEZ PAS**, ne chargez pas ou ne rangez pas l'aspirateur portatif à l'extérieur ou sur une surface mouillée. Rangez l'aspirateur sans fil à l'intérieur. Rangez l'aspirateur après l'utilisation pour éviter des accidents.
- Utilisez seulement de la façon indiquée dans ce manuel.
- NE PERMETTEZ PAS** que cet appareil soit utilisé comme un jouet. Une attention particulière doit être portée lorsqu'utilisé près ou par des enfants. **NE LAISSEZ PAS** l'appareil sans surveillance pendant qu'il est en marche.
- NE MANIPULEZ PAS** la fiche d'alimentation électrique ou l'appareil si vos mains sont mouillées.
- Veuillez terminer, au complet, l'assemblage de votre aspirateur portatif avant de l'utiliser. **N'UTILISEZ PAS** l'aspirateur portatif si le filtre du récipient à poussière n'est pas installé. Utilisez seulement sur des surfaces sèches et à l'intérieur.
- N'UTILISEZ PAS** le chargeur avec une rallonge électrique. Branchez le chargeur directement dans une prise de courant. Utilisez le chargeur seulement dans une prise de courant standard (120 volts, 60 Hz).
- NE TENTEZ PAS** d'utiliser le chargeur avec un autre produit ou essayer de charger cet appareil avec un autre chargeur. **Utilisez seulement le chargeur modèle ZD6W210024US fourni avec l'appareil.**
- N'UTILISEZ PAS** le chargeur si le cordon ou la fiche d'alimentation électrique sont endommagés. Si le chargeur ou l'aspirateur portatif ont été échappés, endommagés, laissés à l'extérieur ou bien échappés dans l'eau, veuillez les retourner à SharkNinja Operating LLC pour une vérification, pour un ajustement ou pour une réparation.
- N'ABÍMEZ PAS** le cordon d'alimentation, ne tirez pas le cordon sur les bords ou les coins tranchants et ne fermez pas une porte sur le cordon. Ne transportez jamais le chargeur ou la base par le cordon ou tirez d'un coup sec pour le débrancher de la prise de courant; tenez plutôt la fiche électrique et tirez pour débrancher. Gardez le cordon du chargeur loin de toutes surfaces chaudes.
- Utilisez seulement les accessoires recommandés par le fabricant. Éteignez toujours l'appareil avant de brancher ou débrancher la brosse motorisée. **N'essayez pas** de changer les accessoires pendant que l'appareil est en fonction.
- Soyez extrêmement prudent lorsque vous nettoyez les escaliers.
- Gardez les cheveux, les vêtements amples, les doigts et toutes autres parties du corps loin des ouvertures et des pièces mobiles.
- N'INSÉREZ PAS** d'objets dans les ouvertures. **N'UTILISEZ PAS** si les ouvertures sont bouchées; assurez-vous qu'il n'y a pas de poussière, de charpie, de cheveux et tout autre objet pouvant réduire le débit d'air.
- NE VOUS SERVEZ PAS** de l'appareil pour ramasser des liquides inflammables ou combustibles tels que l'essence, et ne l'utilisez pas dans des endroits où ces produits peuvent être présents. **NE RAMASSEZ PAS** des objets brûlants ou fumants, tels que des cigarettes, des allumettes ou des cendres chaudes.
- This product includes rechargeable Nickel Metal Hydride batteries. Batteries must be recycled or disposed of properly and safely. The battery must be removed from the appliance before it is discarded. The appliance must be disconnected from the supply when removing the battery. Do not incinerate batteries or expose to high temperatures, as they may explode.**
- DO NOT** charge the battery at temperature below 32°F (0°C). This will degrade the battery performance, shorten life and cause gas leakage from venting. Optimum charging efficiency for the battery is within temperature range of 50°F (10°C) and 86°F (30°C).
- DO NOT** charge with the battery polarity reversed. This will cause battery venting, swelling or rupture.
- Leaks from battery cells can occur under extreme conditions. Improper use of the battery can cause the safety vent to activate. Small amounts of liquid (alkaline electrolyte) will leak from the vent near the terminal. If the liquid gets on the skin, wash immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.**
- N'UTILISEZ PAS** à d'autres fins que celles décrites dans ce manuel. Suivez les instructions et les indications sur toutes les étiquettes.
- Cet aspirateur a été conçu pour un usage domestique seulement.
- DO NOT** charge the unit outdoors.

CONSERVEZ CES INSTRUCTIONS

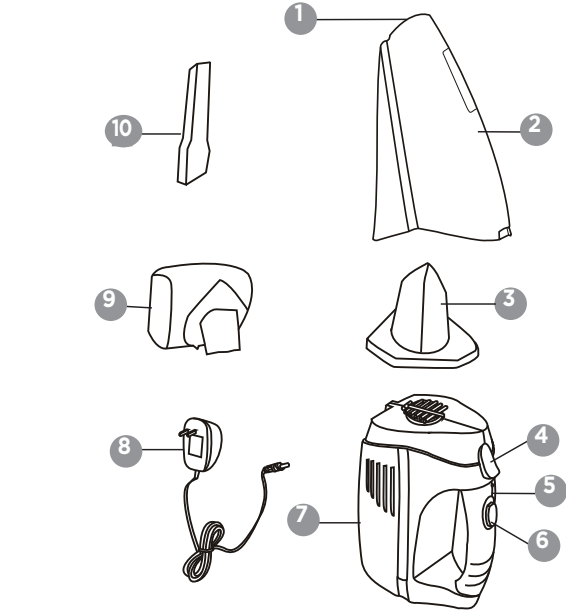

CARACTÉRISTIQUES

- Embout pour admission d'air
- Récipient à poussière
- Filtre du récipient à poussière
- Bouton de dégagement du récipient à poussière
- Témoin lumineux de charge
- Interrupteur d'alimentation
- Boîtier du moteur
- Adaptateur de charge
- Brosse motorisée
- Suceur plat

SPÉCIFICATIONS TECHNIQUES : 15.6 voltc cc

GARANTIE LIMITÉE D'UN (1) AN

SharkNinja Operating LLC garantit ce produit contre toute défectuosité de matériel ou de main-d'œuvre pour une période d'un (1) an à compter de la date d'achat lors d'utilisation dans le cadre d'un usage domestique normal, sujet aux conditions, exclusions et exceptions suivantes.

La responsabilité de SharkNinja Operating LLC se limite au coût des réparations ou du remplacement de l'appareil, à sa discrétion. Cette garantie ne couvre pas l'usure normale des pièces et ne s'applique pas aux appareils ayant été altérés ou utilisés à des fins commerciales. ette garantie limitée ne couvre pas les dommages causés par une mauvaise utilisation, l'abus, la négligence lors de la manipulation, un emballage inadéquat ou la mauvaise manipulation en transit. Cette garantie ne couvre pas les dommages ou défauts causés par ou résultant du transport, des réparations, de l'entretien ou de l'altération du produit ou à ses pièces, effectués par un réparateur non autorisé de SharkNinja Operating LLC.

Les pièces non durable incluant, mais sans s'y limiter, les filtres, les brosses et les pièces électriques qui nécessitent habituellement un remplacement, sont spécifiquement exclus de cette garantie.

Si votre appareil ne fonctionne pas comme il le devrait lors d'un usage domestique normal pendant la période de garantie, vous pouvez le retourner complet avec ses accessoires, frais pré-affranchis. Pour contacter le service à la clientèle, appelez au **1-800-798-7398** ou visitez notre site Internet sur **sharkclean.com**.

S'il s'avérait que l'appareil comporte une défectuosité, SharkNinja Operating LLC le réparera ou le remplacera sans frais, à sa seule discrétion. Une preuve d'achat incluant la date ainsi qu'un chèque au nom de SharkNinja Operating LLC au montant de 11,95 \$ pour couvrir les frais d'expédition de retour et la manutention doivent être inclus.

Cette garantie est couverte pour l'acheteur initial du produit et exclut toute autre garantie légale, implicite ou conventionnelle. La responsabilité de SharkNinja Operating LLC, s'il y en a une, se limite aux obligations spécifiques exprimées sous les termes de cette garantie limitée. En aucun cas, SharkNinja Operating LLC ne peut être tenu responsable d'incidents ou dommages indirects à quiconque et de toute nature que ce soit. Certains états n'autorisent pas l'exclusion ou la limitation de dommages circonstanciels ou conséquents, dans ce cas cette disposition ne s'appliquerait pas.

Cette garantie limitée vous confère des droits juridiques spécifiques, et d'autres droits légaux vous sont peut-être disponibles, variant d'un état à l'autre ou d'une province à l'autre.

***IMPORTANT:** Emballez soigneusement l'appareil pour éviter tout dommage lors du transport. Assurez-vous de joindre la preuve d'achat et d'attacher à l'appareil une étiquette mentionnant votre nom, adresse complète ainsi que le numéro de téléphone, de même que l'information concernant l'achat, le numéro de modèle et le problème, selon vous, de l'appareil. Nous vous recommandons d'assurer votre colis (puisque les dommages lors du transport ne sont pas couverts par la garantie). Indiquez sur l'extérieur de votre colis «ATTENTION SERVICE À LA CLIENTÈLE». Nous travaillons sans relâche afin d'améliorer nos produits et, de ce fait, les spécifications décrites dans ce guide sont sujettes à des changements sans préavis.

****Maximum initial battery voltage**

CHARGEMENT VOTRE ASPIRATEUR PORTATIF

- Before first using the hand vacuum, make sure that the On/Off switch is in the "Off" position and charge until indicator light turns OFF, max. 6 hours.
- Connect the charging jack to the charging hole that is on the back of the vacuum.
- Plug the charger into the wall outlet. The charging indicator light will illuminate to show that the vacuum is being charged.
- After first use, discharge the unit fully and then recharge until indicator light turns OFF, max. 6 hours.

PROLONGER LA DURÉE DE VIE DE VOTRE PILE NI-MH

- Do not store in areas of high temperature or humidity.
- Use only the charger supplied with the product. If other chargers are used, the batteries can fail causing damage to the battery, product or personal property.
- After 3 months of non-use, the product should be fully discharged and then recharged to maximize battery power.
- If the product has never been used or has been stored for an extended period of time without use - it will take several complete charge and discharge cycles to realize the full operational time of your product.
- Ni-MH batteries have a long useful life but at some time they will need to be replaced. To purchase replacement batteries, visit sharkclean.com.

ASSEMBLAGE DE L'ASPIRATEUR PORTATIF

IMPORTANT: le filtre du récipient à poussière doit toujours être en place lorsque vous utilisez l'aspirateur portatif.

- Appuyez sur le bouton de dégagement du récipient à poussière et retirez-le.
- Assurez-vous que le filtre à poussière se trouve à l'intérieur et réinstallez le récipient à l'aspirateur portatif.
- La brosse motorisée peut être utilisée pour nettoyer des moquettes ou tapis à poil ras. Pour installer la brosse motorisée, assurez-vous que l'interrupteur ON/OFF (marche/arrêt) est en position « Off ». Insérez fermement la brosse motorisée dans l'embout d'admission d'air, tout en vous assurant que les broches de contact soient engagées dans les orifices du connecteur de l'unité.

MISE EN GARDE : ne touchez pas à la brosse motorisée lorsqu'elle est en mouvement.

- Le suceur plat peut être utilisé pour nettoyer les endroits en angles, difficile d'accès. Pour installer le suceur plat, poussez-le à l'intérieur de l'embout d'admission d'air.

UTILISATION DE L'ASPIRATEUR PORTATIF

MISE EN GARDE : l'embout d'admission d'air et les accessoires doivent être exempts de tous débris en tout temps car le moteur pourrait surchauffer et être endommagé.

- Pour mettre en marche l'aspirateur, appuyez sur l'interrupteur « On/Off » (marche/arrêt) et mettez-le en position « On ».
- Pour éteindre l'aspirateur, appuyez sur l'interrupteur « On/Off » et mettez-le en position « Off ».

REPLACEMENT ET NETTOYAGE DU FILTRE À POUSSIÈRE

REMARQUE: afin d'assurer un rendement optimal de l'appareil, il est recommandé de remplacer le filtre à poussière à tous les trois (3) mois.

- Appuyez sur le bouton de dégagement du récipient à poussière et retirez-le.
- Retirez avec précaution le filtre du récipient à poussière et videz la poussière.
- Rincez le filtre à poussière avec de l'eau froide et attendez qu'il sèche complètement avant de le remettre dans le récipient à poussière. Ne le lavez pas dans une machine à laver et n'utilisez pas un séchoir à cheveux pour le sécher. Séchez à l'air libre seulement!

REPLACEMENT ET ÉLIMINATION DU BLOC DE PILES

L'aspirateur portatif sans fil est alimenté **par des piles au Ni-MH**, qui doivent être recyclées ou mises au rebut de façon adéquate conformément aux lois de l'état, fédéral et local. Si vous n'êtes pas certain de quelle façon vous devez retirer le bloc de piles, nous vous suggérons d'emmener votre aspirateur portatif à un technicien faisant l'entretien de petits appareils ménager afin qu'il puisse l'effectuer. N'essayez pas de remplacer les piles utilisées dans ce produit avec tout autre type de piles. Suivez ces étapes lorsque le remplacement du bloc de piles est nécessaire :

- À l'aide d'un tournevis Phillips #1, enlevez l'unique vis retenant le couvercle du compartiment de la pile situé sous l'appareil.
- Pour enlever le couvercle, soulevez le couvercle du compartiment de piles. N'ouvrez jamais le compartiment de piles, sauf pour remplacer le bloc de piles. Mettez la vis et le couvercle de côté.
- Soulevez la sangle des piles et sortez-la.
- Soulevez soigneusement le bloc de piles (A) en tirant sur la sangle et débranchez les bornes. Puis, retirez l'unique pile (B) qui se trouve dans le fond et débranchez la borne.

- Branchez en premier les bornes à la nouvelle pile (B) et insérez-la dans le compartiment de piles. Puis branchez les bornes au bloc de piles (A), en prenant soin de brancher en premier le fil de sortie noir (-) au connecteur négatif et ensuite le fil de sortie rouge (+) au connecteur positif puis insérez dans le compartiment des piles. Le filage doit être bien inséré à l'intérieur du compartiment à piles afin que celui-ci n'entre pas en conflit avec le couvercle du compartiment lorsqu'il sera remis en place.

- Remplacez la sangle de la pile, le couvercle du compartiment de piles et la vis en vous assurant de ne pas trop la visser.

MISE EN GARDE : n'utilisez jamais de piles de remplacement régulières, car elles pourraient couler et causer des dommages à l'aspirateur. Utilisez seulement le bloc de piles de remplacement **XB75N**, fourni par SharkNinja Operating LLC.

Veuillez appeler le service à la clientèle au 1-800-798-7398 ou visitez notre site Web au sharkclean.com pour commander un bloc de piles.

MISE EN GARDE :

- Utilisez uniquement avec le bloc de piles fourni.
- N'essayez pas de retirer le bloc de piles de l'appareil afin de le charger.
- Ne jetez jamais le bloc de piles ou l'appareil dans un feu et ne les incinérez pas.
- N'essayez pas de retirer ou d'endommager le boîtier de piles.
- Ne placez pas les piles sur des surfaces métalliques.
- Assurez-vous que les pièces de métal des piles n'entrent pas en contact car elles vont surchauffer.



GUIDE DE DÉPANNAGE

L'aspirateur portatif ne fonctionne pas	Les piles ont besoin d'être rechargées. Les piles ont besoin d'être remplacées. Il n'y a pas de courant dans la prise de courant lorsque le chargeur est utilisé. Essayez d'utiliser une prise différente.
La brosse motorisée ne fonctionne pas	Les broches de métal de la brosse motorisée ne sont pas en contact avec les orifices du connecteur de l'aspirateur. Enlevez la brosse motorisée et réinsérez-la dans l'embout d'admission d'air. La brosse motorisée est obstruée. Retirez toute la charpie, les cheveux, etc. de la brosse motorisée.
L'aspirateur portatif ne ramasse pas ou l'aspiration est faible	Le récipient à poussière est plein. Videz le récipient à poussière. Le filtre à poussière a besoin d'être nettoyé ou remplacé. Nettoyez et remplacez le filtre à poussière. L'aspirateur a besoin d'être rechargé.
La poussière s'échappe de l'aspirateur portatif	Videz le récipient à poussière Le filtre à poussière n'est pas installé correctement. Retirez-le et réinstallez-le. Le filtre à poussière a un trou ou une perforation. Remplacez-le avec un nouveau.

PIÈCES

Pour commander des pièces supplémentaires pour votre ASPIRATEUR PORTATIF SANS FIL SHARK^{MD}, modèles **SV75C_N, SV75ZC_N**, veuillez visiter sharkaccessories.com ou contactez-nous au 1-800-798-7398.

PIÈCES	NUMÉROS DE PIÈCES
Filtre du récipient à poussière	XSB726N
Bloc de piles	XB75N
Chargeur (optionnel)	1048FI
Charging Adaptor	XA75N

SharkNinja Operating LLC
Newton, MA USA 02459
Ville St. Laurent, Québec Canada H4S 1A7

1-800-798-7398
sharkclean.com
Tous droits réservés © SharkNinja Operating LLC 2017
Pour des renseignements sur les brevets de SharkNinja aux É.-U., veuillez visiter sharkninja.com/USPatents.
Shark est une marque déposée de SharkNinja Operating LLC.
Imprimé en Chine.
Les illustrations peuvent différer du produit réel.

